

AIRGROUP

A u s t r a l i a

REGENCY

Spare Parts

Information List

Effective 1st September 2010
ALL PRICES EXCLUDE GST

AIR GROUP AUSTRALIA
28/30 DIVISION STREET
WELSHPOOL WA 6106
Telephone (08) 9350 2200
Facsimile (08) 9353 4225
www.airgroup.com.au

REGENCY SPARE PARTS LIST

CODE	DESCRIPTION	TO SUIT UNIT/S
SPR948-045	# 12 JACK CHAIN - 1.33 FEET REQUIRED (EACH)	P33R, P36
SPR902-267	02-65 REAR LOG	F37, F38, F39
SPR904-723	1/4" x 3/4" GLASS SCREW (EACH)	
SPR910-241	3 WAY GOLD CONTACT SWITCH - VALVE	
SPR936-233	3/4" GLASS GASKET - TOP CHANNEL - PER FOOT	I24, I31
SPR932-104	3/8" ALUMINIUM TUBING - SOLD PER FOOT	
SPR904-636	3/8" x 8" BLACK STEEL PIPE - GAS INLET	F37, F38, F39
SPR904-538	3/8" x 13" BLACK STEEL PIPE - GAS INLET	F37, P36-2
SPR904-565	3/16" ALLEN KEY - FOR AIR ADJUSTMENT 00 / 01	F27, F28, F37, F38, F39
SPR904-529	5/32" ALLEN KEY - PILOT ORIFICE	F33, F38, F39, I31, P33R
SPR936-232	5/8" GLASS GASKET - TOP CHANNEL - PER FOOT	I24
SPR936-237	7/8" DOOR GASKET - PER FOOT - PRESENT	
SPR650-920	7/8" DOOR GASKET REPAIR KIT	ALL UNITS
SPR846-570	7/8" GASKET REPAIR KIT	
SPR936-243	7/8" WINDOW GASKET - PER FOOT	ALL UNITS
SPR936-238	8mm FIBRE GASKET - BOTTOM GLASS CHANNEL	I31
SPR260-565	AIR SHUTTER GEAR ASSEMBLY - 00/01	F27, F37, F38, F39
SPR033-953	AIRTUBES - EACH	
SPR942-110	ASH PLUG - CAST	
SPR820-249	ASH PLUG HANDLE	
SPR033-957	BAFFLE SET	
SPR510-588	BARCELONA HARDWARE PACKAGE	P36
SPR902-183	BAY FRONT BRICK PANEL	I31
SPR433-026	BAY LOUVRE DEFLECTOR	
SPR430-081	BAY LOUVRE MOUNTING BRACKET TOP (EACH)	
SPR511-115	BLACK BAY DOOR TRIM - TOP/BOTTOM	
SPR430-152	BLACK BAY DOOR TRIM - TOP/BOTTOM (EACH)	
SPR846-915	BLACK DOOR - NO GLASS	F33
SPR486-532	BLACK FACEPLATE TRIM REGULAR - COMPLETE	
SPR532-060	BLACK GLASS TRIM - BAY TOP/BOTTOM	
SPR402-046	BLACK GLASS TRIM - FLUSH (EACH)	I31
SPR910-172	BLOWER MOTOR ONLY (EACH) (FAN)	
SPR910-155/P	BLOWER MOTOR ONLY 240 VOLT	ALL UNITS
SPR360-148F	BLOWER SCREENS (EACH)	
SPR948-042	BOTTOM BLACK LOUVRE HINGE (EACH)	I31, P33R, P36
SPR360-038	BOTTOM HINGE BRACKET (EACH)	
SPR610-513	BOTTOM LOUVRE ASSEMBLY	I40, I41
SPR611-525	BOTTOM LOUVRE ASSEMBLY - BLACK 01 / 02 / 03 / 04	I43
SPR846-650	BOTTOM SHIELD HARDWARE PACKAGE - 5 1/2" BOLTS	
SPR430-057	BRICK CLIP - BACK (EACH)	P33R
SPR430-056	BRICK CLIP - TOP (EACH)	P33R
SPR360-120	BRICK CLIP (EACH)	
SPR400-090	BRICK CLIP (EACH)	I31-2, P36,
SPR511-031	BRICK CLIP (EACH)	P36-2
SPR651-076	BRICK CLIP (EACH) 01 / 02 / 03 / 04	I43
SPR902-036	BRICK PANEL - BAY DOOR	P33R
SPR902-184	BRICK PANEL - BAY FRONT	P36
SPR611-923	BRICK PANEL - SET	I43

SPR902-600	BRICK PANEL BASE	
SPR362-528	BRICK PANEL BASE - COMPLETE	
SPR902-603	BRICK PANEL SIDE (EACH)	
SPR033-960	BRICK SET COMPLETE	F2100/F2102/S2102
SPR908-318	BURNER / FAN SWITCH DECAL	P36-2
SPR430-139	BURNER / FAN SWITCH MOUNTING PLATE	
SPR600-185	BURNER / FAN SWITCH MOUNTING PLATE	P33R, P36-2
SPR904-777	BURNER ORIFICE # 29 NG	
SPR904-690	BURNER ORIFICE # 31 NG 01 / 02 / 03 / 04	F38, F43, I43
SPR904-688	BURNER ORIFICE # 32 NG	F39
SPR904-689	BURNER ORIFICE # 33 NG	
SPR904-604	BURNER ORIFICE # 36 NG	F33
CODE	DESCRIPTION	UNITS
SPR904-240	BURNER ORIFICE # 37 NG	F37, I31, I31-2, P36
SPR904-593	BURNER ORIFICE # 40 NG 99 / 00 / 01	
SPR904-346	BURNER ORIFICE # 41 NG - REAR	F27, F28
SPR904-162	BURNER ORIFICE # 43 - NG	I24, P36
SPR904-568	BURNER ORIFICE # 44 NG	
SPR904-655	BURNER ORIFICE # 45 NG	P33R
SPR904-652	BURNER ORIFICE # 46 LPG	
SPR904-622	BURNER ORIFICE # 48 NG - FRONT	F40, F41, I40, I41
SPR904-641	BURNER ORIFICE # 50 LPG	F38, F39
SPR904-645	BURNER ORIFICE # 51 LPG	
SPR904-390	BURNER ORIFICE # 52 LPG	F33, F37, I31, P36
SPR904-345	BURNER ORIFICE # 53 LPG	F27, I31
SPR904-163	BURNER ORIFICE # 54 LPG - REAR	F40-F43, I40-I43, P33R
SPR904-241	BURNER ORIFICE # 56 LPG - FRONT	F40, F41, F43, I40, I41, I43
SPR390-526	BURNER TUBE - LPG	
SPR948-279	BURNER TUBE - LPG	F33
SPR948-188	BURNER TUBE - LPG	GR77, I24
SPR948-271	BURNER TUBE - LPG	I31
SPR651-575	BURNER TUBE - LPG 01 / 02 / 03 / 04	F43
SPR560-515	BURNER TUBE - LPG 99	F27, F28
SPR390-525	BURNER TUBE - NG	
SPR948-294	BURNER TUBE - NG	F33
SPR948-187	BURNER TUBE - NG	GR77, I24
SPR948-270	BURNER TUBE - NG	I31
SPR651-578	BURNER TUBE - NG 01 / 02 / 03 / 04	F43
SPR560-510	BURNER TUBE - NG 99	F27, F28
SPR402-537	BURNER TUBE - NG/LPG	
SPR433-525	BURNER TUBE - NG/LPG	
SPR486-525	BURNER TUBE - NG/LPG	
SPR752-525	BURNER TUBE - NG/LPG	
SPR752-550	BURNER TUBE - NG/LPG	
SPR730-550	BURNER TUBE - NG/LPG	F37, F38, F39
SPR651-580	BURNER TUBE - NG/LPG 00 / 01	F27, F28
SPR360-525	BURNER TUBE ASSEMBLY - NG/LPG	
SPR431-515	BURNER TUBE ASSEMBLY - NG/LPG	P33R
SPR512-525	BURNER TUBE ASSEMBLY - NG/LPG	P36-2
SPR513-535	BURNER TUBE ASSEMBLY - NG/LPG	
SPR746-525	BURNER TUBE ASSEMBLY - NG/LPG	

SPR790-525	BURNER TUBE ASSEMBLY - NG/LPG	
SPR948-140	BURNER TUBE NG/LPG	P36
SPR910-094	CABLE IGNITION	
SPR942-375	CAST BOTTOM SKIRT - BROWN	
SPR942-371	CAST BOTTOM SKIRT - GREY	
SPR942-311	CAST GRILL TOP - GREY	
SPR942-315	CAST GRILL TOP -BROWN	
SPR942-405	CAST INSERT SIDE - BROWN (EACH)	
SPR942-401	CAST INSERT SIDE - GREY (EACH)	
SPR942-395	CAST INSERT TOP - BROWN (EACH)	
SPR942-391	CAST INSERT TOP - GREY (EACH)	
SPR942-325	CAST LEFT SIDE - BROWN	
SPR942-321	CAST LEFT SIDE - GREY	
SPR942-385	CAST LEG - BROWN	
SPR942-381	CAST LEG - GREY	
SPR942-335	CAST RIGHT SIDE - BROWN	
SPR942-331	CAST RIGHT SIDE - GREY	
SPR942-305	CAST TOP - BROWN	
SPR942-301	CAST TOP - GREY	
SPR904-258	CERAMIC MAGNET - SIDE DOOR (EACH)	F27-F43
SPR904-728	CLAMP GROUND	
SPR360-031	COLUMN FINISHING TRIM	PG131
SPR910-084	CONTROL BOX (WHITE BOX)	FG38
SPR910-521	CONTROL BOX CABLE	
CODE	DESCRIPTION	
SPR910-530	CONTROL BOX CABLE	
SPR908-672	CONTROL PANEL DECAL	F33
SPR918-088	CONTROL PANEL DECAL	F37, F38, F39
SPR908-646	CONTROL PANEL DECAL - NOVASIT	F40, F41
SPR908-816	CONTROL PANEL DECAL - ROBERTSHAW	F40, F41
SPR908-057	CONTROL PANEL DECAL 99 / 00 / 01	F28, F43
SPR650-220F	CONTROL PANEL SWITCH PLATE - NOVASIT	F40, F41
SPR591-041	CONTROL PANEL SWITCH PLATE 99 / 00 / 01	F27 - F43
SPR490-061	CONTROL PANEL VALVE COVER PLATE	
SPR360-122	CORNER MAGNET BRACKET	
SPR918-255	DECAL - BURNER FAN/SWITCH	
SPR948-141	DIELECTRIC GREASE (PACKET)	
SPR948-025	DOOR EXTENSION SPRING (EACH)	P33R, P36
SPR948-115	DOOR EXTENSION SPRING (EACH)	
SPR740-542	DOOR FRAME ASSEMBLY	
SPR510-538	DOOR FRAME ASSEMBLY - C/W GLASS	P36
SPR512-518	DOOR FRAME ASSEMBLY - COMPLETE - C/W GLASS	P36-2
SPR360-528/P	DOOR FRAME ASSEMBLY - FRONT - C/W TEMPERED GLASS	
SPR360-529/P	DOOR FRAME ASSEMBLY - SIDE - C/W TEMPERED GLASS	
SPR511-045	DOOR FRAME ONLY	
SPR360-033	DOOR FRAME TRIM FRONT LEFT (EACH)	
SPR360-034	DOOR FRAME TRIM FRONT RIGHT (EACH)	
SPR846-973	DOOR HANDLE / LATCH ASSEMBLY	F33
SPR560-037	DOOR MOUNTING BRACKET	F37, F38, F39
SPR471-031	DOOR SAFETY CLIP	F33
SPR740-066	DOUBLE DOOR CATCH	

SPR904-209	DOUBLE DOOR HINGES (EACH)	
SPR400-540	DRAFT HOOD ASSEMBLY	I31-2
SPR902-156	EMBER / LAVA - BAG	
SPR740-572	EMBER / LAVA PACKAGE COMPLETE	
SPR402-572	EMBER / ROCKWOOL PACKAGE	
SPR902-151	EMBERS - BAG	ALL UNITS
SPR948-247	EXPLOSION DOOR HANDLE (EACH)	P33R
SPR948-253	EXPLOSION DOOR HANDLE (EACH)	P36
SPR846-532	F/P TRIM CORNER CLIPS - PACKAGE	
SPR846-554	FACEPLATE HARDWARE PACKAGE	I24, I31
SPR710-028	FACEPLATE MOUNTING BRACKET (EACH)	I40, I41, I43
SPR610-525	FACEPLATE TRIM COMPLETE - REGULAR 01 / 02 / 03 / 04	
SPR401-524	FACEPLATE TRIM COMPLETE OVERSIZE	I31
SPR401-522	FACEPLATE TRIM COMPLETE REGULAR	I31
SPR591-576	FALSE TOP ASSEMBLY	
SPR630-520	FALSE TOP ASSEMBLY	F39
SPR610-576	FALSE TOP ASSEMBLY 01 / 02 / 03 / 04	F43, I43
SPR560-535	FALSE TOP ASSEMBLY 99 / 00 / 01	F38
SPR640-520	FALSE TOP ASSEMBLY 99 / 00 / 01	F27, F37
SPR910-155/P	FAN - BLOWER MOTOR ONLY 240 VOLT	ALL UNITS
SPR750-040	FAN ACCESS DOOR	
SPR560-055	FAN ACCESS DOOR 99 / 00 / 01	F28, F38
SPR750-074	FAN ACCESS DOOR GASKET	
SPR390-529	FAN ACCESS PLATE/FAN COVER ASSEMBLY	
SPR430-518/P	FAN ASSEMBLY	P33R
SPR486-517/P	FAN ASSEMBLY	
SPR486-519/P	FAN ASSEMBLY	
SPR400-553/P	FAN ASSEMBLY 240 VOLT	I31-2
SPR510-519/P	FAN ASSEMBLY 240 VOLT	P36
SPR590-518/P	FAN ASSEMBLY 240 VOLT	F43
SPR610-518/P	FAN ASSEMBLY 240 VOLT 01 / 02 / 03 / 04	
SPR560-519/P	FAN ASSEMBLY 240 VOLT 99 / 00 / 01	F27, F28, F37, F38, F39
SPR590-105	FAN COVER	F40, F41, F43, I40, I41
SPR936-196	FAN COVER GASKET	F40, F41, F43, I40, I41, I43
SPR560-030	FAN COVER GASKET 99 / 00 / 01	F28
SPR640-033	FAN COVER GASKET 99 / 00 / 01	F27
CODE	DESCRIPTION	
SPRF250-917	FAN FOR HUME F250B WOOD FIRE	
SPR360-147	FAN MOUNTING BRACKET (EACH)	
SPR360-150	FAN MOUNTING BRACKET SIDE	
SPR400-011	FAN OPENING COVER	
SPR910-909	FAN RESISTOR	
SPR910-353	FAN SPEED CONTROLLER - NO KNOB (RHEOSTAT) 240v VARIABLE	F40, F41, I24, I40, I41
SPR904-569	FAN SPEED CONTROLLER KNOB	I40, I41 (U30)
SPR910-142	FAN THERMODISC (60T12) 110 DEGREE (THERMAL DISC)	ALL UNITS
SPR910-233	FAN THERMODISC (60T12) 160 DEGREE	F27-F43
SPR910-991	FAN THERMODISC (60T12) 90 DEGREES	
SPR820-389	FAN THERMODISC BRACKET	
SPR650-086	FAN THERMODISC BRACKET	F40, F41, I41
SPR910-692	FAN WIRE - FAN TO POWER CORD GROUND	
SPR910-881	FAN WIRE - FAN TO TERMINAL BLOCK	

SPR910-895	FAN WIRE - FAN TO TERMINAL BLOCK	
SPR910-808	FAN WIRE - FAN TO THERMODISC	
SPR910-706	FAN WIRE - TERMINAL BLOCK TO THERMODISC	
SPR910-791	FAN WIRE - THERMODISC TO TERMINAL BLOCK	
SPR910-770	FAN WIRE HARNESS - FAN TO MOLEX	I40, I41
SPR910-810	FAN WIRE HARNESS - MOLEX TO RHEOSTAT	I40, I41
SPR910-117	FAN WIRE HARNESS - MOLEX TO SWITCH	I40, I41 (U24)
SPR910-845	FAN WIRING HARNESS	
SPR910-934	FAN WIRING HARNESS	
SPR910-889	FAN WIRING HARNESS - FROM MOLEX TO SWITCH	F43
SPR910-717	FAN WIRING HARNESS - FROM RHEOSTAT TO MOLEX	F40, F41, I31
SPR360-035	FINISHING TRIM	
SPR433-017	FIREBOX BAFFLE	
SPR730-565	FIREBOX BAFFLE / RESTRICTOR ASSEMBLY	F37, F38, F39
SPR560-071	FIREBOX BAFFLE 00 / 01	F27, F28
SPR591-187	FIREBOX BAFFLE 01 / 02 / 03 / 04	F43, I43
SPR360-009	FIREBOX BAFFLE FRONT (EACH)	
SPR360-008	FIREBOX BAFFLE SIDE	
SPR904-599	FITTING ELBOW 90 DEGREE (ORIFICE END)	
SPR904-629	FITTING ELBOW 90 DEGREE FORGED (VALVE OUTLET END)	
SPR910-089	FLAME CABLE	FG38
SPR590-273	FLUE ATTACHMENT BRACKET	
SPR510-066	FLUE RESTRICTOR #1	P36
SPR510-067	FLUE RESTRICTOR #2	P36
SPR430-538	FLUSH DOOR FRAME ASSEMBLY - C/W GLASS	P33R
SPR433-538	FLUSH DOOR FRAME ASSEMBLY - C/W GLASS	
SPR486-547/P	FLUSH DOOR FRAME ASSEMBLY - C/W GLASS	I35
SPR430-023	FLUSH DOOR FRAME ONLY	P33R
SPR433-012	FLUSH DOOR FRAME ONLY	
SPR400-096	FLUSH GLASS CLIP (EACH)	I24 (U23)
SPR402-033	FLUSH GLASS CLIP (EACH)	I31
SPR430-162	FLUSH LOUVRE DEFLECTOR	
SPR511-079	FLUSH LOUVRE HEAT DEFLECTOR	
SPR400-146	FLUSH LOUVRE MOUNTING BRACKET TOP (EACH)	
SPR490-023	FRONT BURNER DEFLECTOR-LOCATED UNDER FRONT LOG NG/LP	F33
SPR700-541	FRONT BURNER TUBE - LPG	F40, F41, I40, I41
SPR700-535/P	FRONT BURNER TUBE - NG	F40, F41, I40, I41
SPR650-574/P	FRONT BURNER TUBE - NG/LPG	F40, F41, I40, I41
SPR390-527	FRONT CONTROL OVER ASSEMBLY	
SPR490-006	FRONT DOOR BOTTOM HEAT SHIELD	F33
SPR942-345	FRONT FRAME - BROWN	
SPR942-341	FRONT FRAME - GREY	
SPR360-123	FRONT MAGNET BRACKET	
SPR936-265	FTV 125x1 SOFT FIBRE GLASS GASKET - SIDE - PER FOOT	P36
SPR904-586	GAS EXTENSION KNOB - HI/LOW ROBERTSHAW VALVE	F40, F41
SPR910-351	GAS EXTENSION KNOB - PILOT ROBERTSHAW VALVE	F40, F41
SPR910-372	GAS EXTRUSION KNOB - HI/LOW NOVASIT VALVE	F28-F43
SPR910-373	GAS EXTRUSION KNOB - PILOT NOVASIT VALVE	F28-F43
CODE	DESCRIPTION	
SPR936-197	GASKET - FLUE COLLAR / STARTER COLLAR	
SPR560-032	GLASS EXTRUSION (EACH) 99 / 00 / 01	F27, F28

SPR936-155	GLASS GASKET - FLUSH - TAD POLE TYPE - PER FOOT	P33R, P36-2
SPR443-937	GLASS REPLACEMENT (11 3/4" x 27 1/2")	I24
SPR846-302	GLASS REPLACEMENT	F33
SPR940-324/P	GLASS REPLACEMENT	
SPR940-078/P	GLASS REPLACEMENT - BAY CENTRE	P33R
SPR940-302/P	GLASS REPLACEMENT - BAY CENTRE	I31
SPR940-315/P	GLASS REPLACEMENT - BAY SIDE (EACH)	I31
SPR940-079/P	GLASS REPLACEMENT - BAY SIDE (EACH)	P33R
SPR940-301/P	GLASS REPLACEMENT - BAY SIDE (EACH)	I31
SPR940-314/P	GLASS REPLACEMENT - CENTRE ****	I31
SPR940-098/P	GLASS REPLACEMENT - DECORATIVE BAY CENTRE	P36
SPR940-096/P	GLASS REPLACEMENT - DECORATIVE BAY SIDE (EACH)	P36
SPR401-547/P	GLASS REPLACEMENT - FLUSH	I31
SPR940-088/P	GLASS REPLACEMENT - FLUSH FRONT	P33R
SPR940-090/P	GLASS REPLACEMENT - FLUSH FRONT (SIZE: 31 3/4" x 18")	P36
SPR402-515/P	GLASS REPLACEMENT - FLUSH SIZE (27 1/2" x 13 1/4")	I31
SPR940-227/P	GLASS REPLACEMENT - MITRED CENTRE	F40, F41, F43, I40, I41, I43
SPR940-237/P	GLASS REPLACEMENT - MITRED CENTRE 99 / 00 / 01	F27, F28
SPR940-226/P	REPLACEMENT GLASS - MITRED SIDE (EACH)	F40, F41, F43, I40, I41, I43
SPR940-236/P	GLASS REPLACEMENT - MITRED SIDE (EACH) 99 / 00 / 01	F27, F28
SPR940-322/P	GLASS REPLACEMENT - MITRED/PANEL CENTRE	F37, F38, F39
SPR940-323/P	GLASS REPLACEMENT - MITRED/PANEL SIDE (EACH)	F37, F38, F39
SPR940-094/P	GLASS REPLACEMENT - REGULAR BAY CENTRE	P36
SPR940-092/P	GLASS REPLACEMENT - REGULAR BAY SIDE (EACH)	P36
SPR940-325/P	GLASS REPLACEMENT - WRAP AROUND	
SPR948-170/P	GLASS RETAINER	
SPR846-920	GLASS RETAINER CLIPS - 8 PER PACKAGE	F33
SPR904-691	GLASS U CLIP (EACH)	P33R, P36-2
SPR444-162/P	GOLD FLUSH GLASS TRIM (EACH)	I24, I31
SPR590-174G	GOLD LOUVRE - LARGE	F40, F41, F43, I40, I41
SPR590-099/G	GOLD LOUVRE - SMALL (EACH)	F40, F41, F43, I40, I41, I43
SPR360-027	GRATE ASSEMBLY	
SPR390-000	GRATE ASSEMBLY	
SPR430-100	GRATE ASSEMBLY	P33R
SPR433-024	GRATE ASSEMBLY	
SPR486-048	GRATE ASSEMBLY	
SPR511-030	GRATE ASSEMBLY	P36-2
SPR402-019	GRATE ASSEMBLY - NG/LPG	I31
SPR740-067	GRILL CATCH LOWER (EACH)	
SPR740-069	GRILL CATCH UPPER	
SPR948-219	HAMPTON LOGO PLATE (EACH)	
SPR390-056	HANDLE - SCREEN DOOR	
SPR490-537	HARDWARE PACKAGE - LARGE SPRING/HINGE CAPS	
SPR846-537	HARDWARE PACKAGE - SMALL SPRING/HINGE CAPS	
SPR650-105	HEAT EXCHANGER BAFFLE PLATE	F40, F41, I40, I41
SPR846-918	HINGE CAPS - 2 PER SET	F33
SPR390-033	HOOD PILOT	
SPR910-082	IGNITION DIRECT SPARK ASSEMBLY	FG38
SPR910-916	IGNITION MODULE	
SPR910-912	IGNITION MODULE TO VALVE CABLE	PG33, PG36
SPR846-531	INBUILT FACEPLATE HARDWARE PACKAGE	

SPR904-658	INLET FLEX GAS LINE	
SPR904-637	INLET GAS LINE	
SPR510-153	INNER TOP BAFFLE PLATE	P36
SPR780-010	INNER TOP BAFFLE PLATE	
SPR918-001	INSTRUCTION MANUAL	I31
SPR918-045	INSTRUCTION MANUAL	P33R
SPR918-081	INSTRUCTION MANUAL	F39
SPR918-179	INSTRUCTION MANUAL	
SPR918-236	INSTRUCTION MANUAL	
CODE	DESCRIPTION	
SPR918-243	INSTRUCTION MANUAL	
SPR918-278	INSTRUCTION MANUAL	FG39
SPR918-337	INSTRUCTION MANUAL	HG35
SPR918-448	INSTRUCTION MANUAL	IG35
SPR918-464	INSTRUCTION MANUAL	I35
SPR918-532	INSTRUCTION MANUAL	
SPR918-533	INSTRUCTION MANUAL	
SPR918-534	INSTRUCTION MANUAL	F38
SPR918-537	INSTRUCTION MANUAL	
SPR918-538	INSTRUCTION MANUAL	P36
SPR918-552	INSTRUCTION MANUAL	
SPR918-554	INSTRUCTION MANUAL	
SPR918-646	INSTRUCTION MANUAL	
SPR918-647	INSTRUCTION MANUAL	
SPR918-648	INSTRUCTION MANUAL	PG121, PG131
SPR918-650	INSTRUCTION MANUAL	
SPR918-651	INSTRUCTION MANUAL	
SPR908-288	INSTRUCTION MANUAL - FREESTANDING	
SPR908-332	INSTRUCTION MANUAL - INSERT	
SPR908-005	INSTRUCTION MANUAL - ZERO CLEARANCE BOX	F27, I31
SPR918-238	INSTRUCTION MANUAL - ZERO CLEARANCE BOX	
SPR908-427	INSTRUCTION MANUAL - ZERO CLEARANCE BOX 01/02/03/04	I43
SPR910-312	ITT PILOT ORIFICE - LPG	F40, I40, I41, I43
SPR910-311	ITT PILOT ORIFICE - NG	F40, I40, I41, I43
SPR650-965	ITT REPLACEMENT PILOT ASSEMBLY - NG/LPG	F40, I40, I41
SPR910-328	ITT THERMOPILE	F40, I40, I41, I43
SPR910-514	JUMPER	
SPR910-095	KNOB PUSH / PULL 10-32	
SPR902-154	LAVA - BAG	F28-F39, I31, P33R-P36
SPR902-193	LEFT FRONT FIBRE LOG	F40, F41, F43, I40, I41, I43
SPR650-527	LEFT SIDE DOOR HINGE ASSEMBLY (EACH)	F40, F41, F43, I40, I41, I43
SPR918-247	LIGHTING INSTRUCTION ECS MANUAL	
SPR490-932	LOG SET - COMPLETE	F33 (C33)
SPR730-935	LOG SET - COMPLETE	F38
SPR650-933	LOG SET - COMPLETE	F40, F41, F43, I40, I41
SPR390-930	LOG SET - COMPLETE	G51
SPR400-949	LOG SET - COMPLETE	I31 (U31)
SPR650-932	LOG SET - COMPLETE	F40, F41, I40, I41
SPR360-930	LOG SET - COMPLETE	
SPR402-935	LOG SET - COMPLETE	F37, F39
SPR431-930	LOG SET - COMPLETE	P33R

SPR444-953	LOG SET - COMPLETE	I24
SPR780-930	LOG SET - COMPLETE	
SPR510-933	LOG SET - COMPLETE	P36
SPR512-930	LOG SET - COMPLETE	P36
SPR560-935	LOG SET - COMPLETE 00 / 01 - F27	F28
SPR560-933	LOG SET - COMPLETE 99	F27, F28
SPR710-017	LOUVRE BRACKET - BOTTOM - LEFT SIDE 01 / 02 / 03 / 04	I43
SPR710-016	LOUVRE BRACKET - BOTTOM - RIGHT SIDE 01 / 02 / 03 / 04	I43
SPR590-101	LOUVRE BRACKET (EACH)	F40, F41, F43, I40, I41, I43
SPR510-026	LOWER HINGE BRACKET (EACH)	P36
SPR904-257	MAGNETIC DOOR CATCH - ULTIMATE	ALL UNITS
SPR910-138	MANUAL / AUTO SWITCH - COPPER	
SPR910-526	MANUAL CONTROL FIREGENIE	
SPR486-538	MANUAL CONTROL SWITCH ASSEMBLY - COMPLETE	IG35
SPR815-557	MEDIUM REAR AIR DEFLECTOR	
SPR650-236	METAL EXTRUSION - EXTRUDED DOOR (EACH) 01/02/03/04	F43, I43
SPR750-015	METAL EXTRUSIONS - MITRED DOOR (EACH)	F37, F38, F39
SPR910-083	MODULE SIT 230 V	FG38
SPR910-922	MODULE SIT 230 V	
SPR640-034	MOUNTING PLATE GASKET	
SPR430-032	NAILING STRIP - SIDES (EACH)	P33R
CODE	DESCRIPTION	
SPR510-064	NAILING STRIP - SIDES (EACH)	P36
SPR430-031	NAILING STRIP - TOP	P33R
SPR510-033	NAILING STRIP - TOP	P36
SPR360-046	NAILING STRIP TOP - FRONT (EACH)	
SPR360-047	NAILING STRIP TOP - SIDE	
SPR910-422	NOVASIT 3" EXTENSION KNOB - BAY ONLY - HI/LOW	I31, P33R, P36
SPR910-421	NOVASIT 3" EXTENSION KNOB - BAY ONLY - PILOT	I31, P33R, P36
SPR910-030	NOVASIT ELECTRODE	F27-F43, I31, P33R, P36-2
SPR910-007	NOVASIT ELECTRODE	
SPR910-936	NOVASIT INTERMITTENT PILOT ASSEMBLY	F33-F39, I31, I43, P33R, P36-2
SPR910-035	NOVASIT PILOT ASSEMBLY - LPG	F33, F38, I31-2, P33R, P36-2
SPR910-025	NOVASIT PILOT ASSEMBLY - LPG	F40, F41, F43
SPR910-039	NOVASIT PILOT ASSEMBLY - LPG	F37, F39
SPR910-127	NOVASIT PILOT ASSEMBLY - LPG (WITH LONG ELECTRODE)	
SPR910-049	NOVASIT PILOT ASSEMBLY - LPG 01 / 02 / 03 / 04	I43
SPR910-034	NOVASIT PILOT ASSEMBLY - NG	F33, F38, I31-2, P33R, P36-2
SPR910-024	NOVASIT PILOT ASSEMBLY - NG	F40, F41, F43
SPR910-038	NOVASIT PILOT ASSEMBLY - NG	P36-3, F37, F39, P121
SPR910-126	NOVASIT PILOT ASSEMBLY - NG (WITH LONG ELECTRODE)	
SPR910-048	NOVASIT PILOT ASSEMBLY - NG 01 / 02 / 03 / 04	I43
SPR910-096	NOVASIT PILOT HOOD NG/LPG	I31-3, F38-2, P36-2, P33
SPR910-383	NOVASIT PILOT ORIFICE - LPG	F27-F43
SPR910-037	NOVASIT PILOT ORIFICE - LPG	F33-F39, I31, I43, P33R
SPR910-100	NOVASIT PILOT ORIFICE - NG	
SPR910-036	NOVASIT PILOT ORIFICE - NG	P36
SPR910-382	NOVASIT PILOT ORIFICE - NG	F27-F43
SPR910-432	NOVASIT PILOT TUBING	ALL UNITS
SPR910-018	NOVASIT REGULATOR - LPG	F27-F43
SPR910-017	NOVASIT REGULATOR - NG	F27-F43, P36

SPR590-591/P	NOVASIT VALVE ASSEMBLY - LPG	F40, F41
SPR462-561/P	NOVASIT VALVE ASSEMBLY - LPG	F33
SPR641-524/P	NOVASIT VALVE ASSEMBLY - LPG 00 / 01	F27
SPR630-517/P	NOVASIT VALVE ASSEMBLY - LPG 99	F27
SPR590-590/P	NOVASIT VALVE ASSEMBLY - NG	F40, F41
SPR462-560/P	NOVASIT VALVE ASSEMBLY - NG	F33
SPR640-522/P	NOVASIT VALVE ASSEMBLY - NG 00 / 01	F27
SPR630-515/P	NOVASIT VALVE ASSEMBLY - NG 99	F27
SPR910-478	NOVASIT VALVE ONLY - NG/LPG	
SPR948-241	OJOP DOOR LATCH	F40, F41, I40, I41, I43
SPR948-255	OJOP LATCH - WITH EYELET HOOK (EACH) 99 / 00 / 01	F27, F28, F37, F38, F39
SPR910-246	ON/OFF - TWO WAY GOLD CONTACT SWITCH (Rocker Switch)	F33, F40, F41, I24, I40, I41
SPR430-019	ONE PIECE FACEPLATE	P33R
SPR510-039	ONE PIECE FACEPLATE	P36
SPR936-170	ORIFICE GASKET	F37, F39
SPR910-093	OXYPILOT PILOT ASSEMBLY - LPG	
SPR910-092	OXYPILOT PILOT ASSEMBLY - NG	
SPR820-058F	PEDESTAL COVER PLATE	
SPR730-039	PEDESTAL DOOR	F37, F38, F39
SPR910-190	PIEZO IGNITOR - BUTTON ONLY	ALL UNITS
SPR910-387	PIEZO IGNITOR WIRE - BLACK	F28, F33, F40
SPR420-053	PILOT ASSEMBLY GASKET	P36
SPR433-020	PILOT DEFLECTOR	
SPR910-920	PILOT ORIFICE LPG	FG39
SPR904-766	PILOT TUBE FITTINGS (EACH)	
SPR932-102	PILOT TUBING - SOLD PER FOOT	
SPR910-932	PILOT TUBING WITH FITTINGS	
SPR910-021	PILOT TUBING WITH NUTS	P36
SPR910-714	POWER CORD	ALL UNITS
SPR730-560	PRESSURE RELIEF / EXPLOSION DOOR ASSEMBLY	F37, F39
SPR640-525	PRESSURE RELIEF / EXPLOSION DOOR ASSEMBLY 99 / 00 / 01	F27
SPR730-034	PRESSURE RELIEF / EXPLOSION DOOR GASKET	F37, F38, F39
SPR904-732	PRESSURE RELIEF BOLT (EACH)	
CODE	DESCRIPTION	
SPR948-027	PRESSURE RELIEF SPRING (EACH)	
SPR360-055	PRESSURE RELIEF TOP ANGLE IRON (EACH)	
SPR360-054	PRESSURE RELIEF TOP PLATE (EACH)	
SPR360-086	PRESSURE RELIEF TOP PLATE GASKET (EACH)	
SPR948-231	PRIMARY AIR ADJUSTMENT ROD 99	F27
SPR910-915	PSE INTERMITTENT PILOT ASSEMBLY	
SPR910-012	PSE PILOT ASSEMBLY - LPG	P36
SPR910-010	PSE PILOT ASSEMBLY - NG	P36
SPR910-019	PSE PILOT ORIFICE - LPG	P36 SERIES I
SPR910-020	PSE PILOT ORIFICE - NG	P36 SERIES I
SPR910-386	QUICK DROPOUT THERMOCOUPLE	F27-F43, I31, I43
SPR490-068	REAR BURNER DEFLECTOR BACK - LOCATED BETWEEN	F33
SPR460-011	REAR BURNER DEFLECTOR BACK - LOCATED UNDER REAR	F33
SPR490-025	REAR BURNER DEFLECTOR BOTTOM - LOCATED ON LEFT	F33
SPR460-009	REAR BURNER DEFLECTOR FRONT - LOCATED ON LEFT SIDE	F33
SPR460-010	REAR BURNER DEFLECTOR FRONT - LOCATED ON RIGHT SIDE	F33
SPR700-542	REAR BURNER TUBE - LPG	F40, F41, I40, I41

SPR650-575/P	REAR BURNER TUBE - LPG	F40, F41, I40, I41
SPR700-536/P	REAR BURNER TUBE - NG	F40, F41, I40, I41
SPR650-578/P	REAR BURNER TUBE - NG	F40, F41, I40, I41
SPR750-083	REAR CONTROL PANEL	FG38
SPR680-032	REAR CONTROL PANEL	
SPR730-048	REAR CONTROL PANEL	
SPR750-067	REAR CONTROL PANEL	
SPR750-082	REAR CONTROL PANEL BRACKET	FG38
SPR918-250	REAR CONTROL PANEL DECAL	FG38
SPR918-089	REAR CONTROL PANEL DECAL	
SPR630-021	REAR FAN ACCESS PANEL	F37, F39
SPR902-194	REAR FIBRE LOG	F40, F41, F43, I43
SPR650-546	REAR LOG BRACKET - NG/LPG	F40, F41, I41
SPR590-044/P	REAR LOG BRACKET - NG/LPG - SET	F40, F41, I40
SPR431-512	REAR LOG BRACKET ASSEMBLY	P33R
SPR433-019	REAR LOG BRACKET ASSEMBLY	
SPR730-528	REAR LOG BRACKET ASSEMBLY	
SPR752-528	REAR LOG BRACKET ASSEMBLY	F37, F38, F39
SPR512-520	REAR LOG SUPPORT ASSEMBLY	P36-2
SPR780-028	REAR LOG SUPPORT ASSEMBLY	
SPR390-528	REAR LOG SUPPORT BRACKET ASSEMBLY	
SPR680-030	REAR PANEL	
SPR730-044	REAR PANEL	
SPR750-026	REAR PANEL	
SPR610-175	REAR PANEL 02 / 03 / 04	
SPR560-025	REAR PEDESTAL BACK COVER	F37, F38, F39
SPR750-084	REAR PEDESTAL COVER PLATE	
SPR740-548	REAR PRESSURE RELIEF / EXPLOSION DOOR ASSEMBLY	
SPR740-059	REAR PRESSURE RELIEF / EXPLOSION DOOR GASKET	
SPR640-071	REAR VENT STARTER COLLAR 99 / 00 / 01	F27
SPR948-216	REGENCY LOGO PLATE (SMALL)	F37, F38, F39, I43
SPR910-054	REGULATOR - LPG	
SPR910-053	REGULATOR - NG	
SPR910-399	REMOTE RF	
SPR443-937	REPLACEMENT GLASS (11 3/4" x 27 1/2")	I24
SPR846-302	REPLACEMENT GLASS	F33
SPR940-324/P	REPLACEMENT GLASS	
SPR940-078/P	REPLACEMENT GLASS - BAY CENTRE	P33R
SPR940-302/P	REPLACEMENT GLASS - BAY CENTRE	I31
SPR940-315/P	REPLACEMENT GLASS - BAY SIDE (EACH)	I31
SPR940-079/P	REPLACEMENT GLASS - BAY SIDE (EACH)	P33R
SPR940-301/P	REPLACEMENT GLASS - BAY SIDE (EACH)	I31
SPR940-314/P	REPLACEMENT GLASS - CENTRE ****	I31
SPR940-098/P	REPLACEMENT GLASS - DECORATIVE BAY CENTRE	P36
SPR940-096/P	REPLACEMENT GLASS - DECORATIVE BAY SIDE (EACH)	P36
CODE	DESCRIPTION	
SPR401-547/P	REPLACEMENT GLASS - FLUSH	I31
SPR940-088/P	REPLACEMENT GLASS - FLUSH FRONT	P33R
SPR940-090/P	REPLACEMENT GLASS - FLUSH FRONT (SIZE: 31 3/4" x 18")	P36
SPR402-515/P	REPLACEMENT GLASS - FLUSH SIZE (27 1/2" x 13 1/4")	I31
SPR940-227/P	REPLACEMENT GLASS - MITRED CENTRE	F40, F41, F43, I40, I41, I43

SPR940-237/P	REPLACEMENT GLASS - MITRED CENTRE 99 / 00 / 01	F27, F28
SPR940-226/P	REPLACEMENT GLASS - MITRED SIDE (EACH)	F40, F41, F43, I40, I41, I43
SPR940-236/P	REPLACEMENT GLASS - MITRED SIDE (EACH) 99 / 00 / 01	F27, F28
SPR940-322/P	REPLACEMENT GLASS - MITRED/PANEL CENTRE	F37, F38, F39
SPR940-323/P	REPLACEMENT GLASS - MITRED/PANEL SIDE (EACH)	F37, F38, F39
SPR940-094/P	REPLACEMENT GLASS - REGULAR BAY CENTRE	P36
SPR940-092/P	REPLACEMENT GLASS - REGULAR BAY SIDE (EACH)	P36
SPR940-325/P	REPLACEMENT GLASS - WRAP AROUND	
SPR918-266	RESET BUTTON DECAL	
SPR910-906	RESET SWITCH	FG38
SPR902-192	RIGHT FRONT FIBRE LOG	F40, F41, F43, I43
SPR650-528	RIGHT SIDE DOOR HINGE ASSEMBLY (EACH)	F40, F41, F43, I40, I41, I43
SPR910-424	ROBERTSHAW 2 1/2" EXTENSION KNOB - BAY ONLY - PILOT	I31
SPR910-426	ROBERTSHAW 2 1/2" EXTENSION KNOB - HI/LOW - 01/02/03	I31, I43
SPR910-362	ROBERTSHAW PILOT ASSEMBLY - LPG	I24, I31
SPR910-361	ROBERTSHAW PILOT ASSEMBLY - NG	I24, I31
SPR904-232	ROBERTSHAW PILOT ORIFICE - LPG (ORIFICE SIZE 11)	I24
SPR910-313	ROBERTSHAW PILOT ORIFICE - NG (ORIFICE SIZE 18)	I24, I30, I31
SPR910-295	ROBERTSHAW REGULATOR - LPG	F40, F41, I24-I43
SPR910-346	ROBERTSHAW REGULATOR - NG	F40, F41, I24-I43
SPR910-411	ROBERTSHAW THERMOCOUPLE	I24, I31, I31 SERIES 2, P36
SPR910-341	ROBERTSHAW THERMOPILE	F27-F41, I24, I31, I43
SPR590-562/P	ROBERTSHAW VALVE ASSEMBLY - LPG	F40, F41
SPR402-566/P	ROBERTSHAW VALVE ASSEMBLY - LPG	I31-2
SPR610-564/P	ROBERTSHAW VALVE ASSEMBLY - LPG	I40, I41
SPR610-593/P	ROBERTSHAW VALVE ASSEMBLY - LPG	I40, I41
SPR400-566/P	ROBERTSHAW VALVE ASSEMBLY - LPG	I31
SPR543-566/P	ROBERTSHAW VALVE ASSEMBLY - LPG	I24
SPR590-560/P	ROBERTSHAW VALVE ASSEMBLY - NG	F40, F41
SPR610-592/P	ROBERTSHAW VALVE ASSEMBLY - NG	I40, I41
SPR400-565/P	ROBERTSHAW VALVE ASSEMBLY - NG	I31
SPR402-565/P	ROBERTSHAW VALVE ASSEMBLY - NG	I31-2
SPR543-565/P	ROBERTSHAW VALVE ASSEMBLY - NG	I24
SPR610-563/P	ROBERTSHAW VALVE ASSEMBLY - NG	I40, I41
SPR910-027	ROBERTSHAW VALVE ONLY - LPG	I24, I31, I31 SERIES 2
SPR910-026	ROBERTSHAW VALVE ONLY - NG	I24, I31, I31 SERIES 2
SPR910-029	ROBERTSHAW VALVE ONLY w BLACK KNOB - LPG	F40, F41, I40, I41, I43
SPR910-028	ROBERTSHAW VALVE ONLY w BLACK KNOB - NG	F40, F41, I40, I41, I43
SPR902-153	ROCKWOOL - BAG	ALL UNITS
SPR904-196	ROUND CERAMIC MAGNET - BAY TRIM (EACH)	I31, P33R, P36
SPR750-532	SAFETY SCREEN	
SPR460-532	SAFETY SCREEN (AUSTRALIA ONLY)	
SPR611-532	SAFETY SCREEN 01 / 02 / 03 / 04	
SPR910-975	SAFETY THERMODISC SWITCH	
SPR910-987	SAFETY THERMODISC SWITCH	
SPR560-031	SIDE DOOR HINGE - SIDE DOORS (EACH) 99 / 00 / 01	F27, F28, F37, F38, F39
SPR740-061	SIDE INSERT BRACKET	
SPR740-063	SIDE INSERT SPRING	
SPR486-930	SIDE LOGS / EMBERS / LAVA	
SPR756-520	SIDE PANEL ASSEMBLY - LEFT	F38
SPR730-525	SIDE PANEL ASSEMBLY - LEFT	F37, F38, F39

SPR756-518	SIDE PANEL ASSEMBLY - RIGHT	F38
SPR730-530	SIDE PANEL ASSEMBLY - RIGHT	F37, F38, F39
SPR590-541	SIDE PANEL ASSEMBLY LEFT	F43
SPR610-520	SIDE PANEL ASSEMBLY LEFT 01	I43
SPR613-520	SIDE PANEL ASSEMBLY LEFT 02 / 03 / 04	I43
SPR560-557	SIDE PANEL ASSEMBLY LEFT 99 / 00 / 01	F27, F28
CODE	DESCRIPTION	
SPR610-521	SIDE PANEL ASSEMBLY RIGHT 01	I43
SPR613-522	SIDE PANEL ASSEMBLY RIGHT 02 / 03 / 04	I43
SPR560-556	SIDE PANEL ASSEMBLY RIGHT 99 / 00 / 01	F27, F28
SPR910-081	SIGMA VALVE - LPG	FG38
SPR910-080	SIGMA VALVE - NG	FG38
SPR910-091	SIMPLOSI VALVE ONLY - LPG	
SPR910-090	SIMPLOSI VALVE ONLY - NG	
SPR923R	SIMPSON DURAVENT STARTER COLLAR	
SPR910-088	SPARK CABLE	F38, FG38
SPR910-073	SPARK GENERATOR BATTERY HOLDER	P36
SPR910-074	SPARK GENERATOR SWITCH C/W WIRE	P36
SPR910-325	SPILL SWITCH - AUTO RESET 250 DEGREE LPG	I40, I41, I43
SPR910-326	SPILL SWITCH - AUTO RESET 275 DEGREE NG	I40, I41
SPR910-220	SPILL SWITCH - AUTO RESET 350 DEGREE NG/LPG	I24, I31
SPR910-252	SPILL SWITCH - MANUAL RESET 250 DEGREE	F43
SPR910-250	SPILL SWITCH - MANUAL RESET 300 DEGREE (60Tv14)	F28, F38, F33, F40, F41, I40
SPR948-101	SPRING HANDLE (LARGE)	F33
SPR948-102	SPRING HANDLE (SMALL)	
SPR846-404	STANDARD FIREBRICK - BOX OF 20 BRICKS	
SPR511-044	STANDOFF - SIDES/BACK (EACH)	
SPR936-194	STARTER COLLAR GASKET 99 / 00 / 01	F27, F39
SPR600-947	STRAIN RELIEF KIT	P36
SPR910-935	SWITCH MANUAL CONTROL ECS	IG35
SPR910-527	SWITCH MANUAL CONTROL ECS C/W WIRE HARNESS	FG38
SPR600-184	SWITCH PLATE MOUNTING BRACKET	P33R, P36-2
SPR910-695	SWITCH WIRE ASSEMBLY - SWITCH TO VALVE	I24, I43
SPR910-184	TERMINAL BLOCK	
SPR910-006	TERMINAL BLOCK - 3 POLE	ALL UNITS
SPR910-908	TERMINAL BLOCK - 9 POLE	
SPR510-125	TERMINAL BLOCK HOUSING	P36, P33R
SPR510-126	TERMINAL BLOCK HOUSING COVER	P36, P33R
SPR400-023	THERMODISC BRACKET	
SPR400-068	THERMODISC COVER MOUNTING PLATE	
SPR910-140	THREE WAY FAN SWITCH - HI/LOW	ALL UNITS
SPR360-127	TOP 3" EXTENSION TRIM (EACH)	PG121
SPR360-532	TOP 3" EXTENSION TRIM ASSEMBLY	PG131
SPR740-062	TOP INSERT BRACKET (EACH)	
SPR590-514/P	TOP LOUVRE ASSEMBLY	F40, F41, F43, I40, I41, I43
SPR653-535G	TOP LOUVRE ASSEMBLY 02 / 03 / 04	
SPR770-066F	TOP RELIEF PLATE / EXPLOSION DOOR (EACH)	
SPR430-001F	TOP STANDOFF (EACH)	P33R
SPR433-011/F	TOP STANDOFF (EACH)	P36
SPR510-011	TOP STANDOFF (EACH)	
SPR910-169/P	TRANSFLO BLOWER - MOTOR ONLY	F27-F39, P33R

SPR910-246	TWO WAY GOLD CONTACT SWITCH BUTTON ONLY (Rocker Switch)	F33, F40, F41, I24, I40, I41
SPR904-712	U CLIP - SCREEN DOOR (EACH)	
SPR948-118	ULTRAGLOW LOGO PLATE	
SPR360-580/P	VALVE ASSEMBLY - LPG	
SPR390-511/P	VALVE ASSEMBLY - LPG	
SPR431-564/P	VALVE ASSEMBLY - LPG	P33R
SPR432-562/P	VALVE ASSEMBLY - LPG	
SPR486-576/P	VALVE ASSEMBLY - LPG	
SPR486-580/P	VALVE ASSEMBLY - LPG	
SPR510-518/P	VALVE ASSEMBLY - LPG	P36
SPR512-517/P	VALVE ASSEMBLY - LPG	P36-2
SPR516-576/P	VALVE ASSEMBLY - LPG	
SPR591-598/P	VALVE ASSEMBLY - LPG	F43
SPR680-576/P	VALVE ASSEMBLY - LPG	F37
SPR730-576/P	VALVE ASSEMBLY - LPG	F39
SPR736-576/P	VALVE ASSEMBLY - LPG	
SPR746-576/P	VALVE ASSEMBLY - LPG	
SPR752-529/P	VALVE ASSEMBLY - LPG	
CODE	DESCRIPTION	
SPR756-529/P	VALVE ASSEMBLY - LPG	
SPR780-576/P	VALVE ASSEMBLY - LPG	
SPR781-576/P	VALVE ASSEMBLY - LPG	
SPR561-529/P	VALVE ASSEMBLY - LPG 00 / 01	F28
SPR611-566/P	VALVE ASSEMBLY - LPG 01 / 02 / 03 / 04	I41, I43
SPR560-523/P	VALVE ASSEMBLY - LPG 99	F28
SPR360-578/P	VALVE ASSEMBLY - NG	
SPR390-510/P	VALVE ASSEMBLY - NG	
SPR431-563/P	VALVE ASSEMBLY - NG	P33R
SPR432-560/P	VALVE ASSEMBLY - NG	
SPR486-574/P	VALVE ASSEMBLY - NG	
SPR486-578/P	VALVE ASSEMBLY - NG	
SPR510-516/P	VALVE ASSEMBLY - NG	P36
SPR512-516/P	VALVE ASSEMBLY - NG	P36-2
SPR513-560/P	VALVE ASSEMBLY - NG	
SPR516-574/P	VALVE ASSEMBLY - NG	
SPR591-597/P	VALVE ASSEMBLY - NG	F43
SPR680-574/P	VALVE ASSEMBLY - NG	F37
SPR730-574/P	VALVE ASSEMBLY - NG	F39
SPR736-574/P	VALVE ASSEMBLY - NG	
SPR746-574/P	VALVE ASSEMBLY - NG	
SPR752-527/P	VALVE ASSEMBLY - NG	
SPR756-527/P	VALVE ASSEMBLY - NG	
SPR780-574/P	VALVE ASSEMBLY - NG	
SPR781-574/P	VALVE ASSEMBLY - NG	
SPR561-527/P	VALVE ASSEMBLY - NG 00 / 01	F28
SPR611-564/P	VALVE ASSEMBLY - NG 01 / 02 / 03 / 04	I43
SPR560-520/P	VALVE ASSEMBLY - NG 99	F28
SPR630-009	VALVE ASSEMBLY / AIR PASSAGE GASKET 99 / 00 / 01	F27, F37, F39
SPR430-055	VALVE ASSEMBLY GASKET	P36 SERIES 2, P33R
SPR360-090	VALVE ASSEMBLY GASKET	
SPR780-021	VALVE ASSEMBLY GASKET	





























